

Datacom interface to magnet power supplies

B. B. Culwick

June 1972

Collider Accelerator Department
Brookhaven National Laboratory

U.S. Department of Energy

USDOE Office of Science (SC)

Notice: This technical note has been authored by employees of Brookhaven Science Associates, LLC under Contract No.AT(30-1)-16 with the U.S. Department of Energy. The publisher by accepting the technical note for publication acknowledges that the United States Government retains a non-exclusive, paid-up, irrevocable, world-wide license to publish or reproduce the published form of this technical note, or allow others to do so, for United States Government purposes.

DISCLAIMER

This report was prepared as an account of work sponsored by an agency of the United States Government. Neither the United States Government nor any agency thereof, nor any of their employees, nor any of their contractors, subcontractors, or their employees, makes any warranty, express or implied, or assumes any legal liability or responsibility for the accuracy, completeness, or any third party's use or the results of such use of any information, apparatus, product, or process disclosed, or represents that its use would not infringe privately owned rights. Reference herein to any specific commercial product, process, or service by trade name, trademark, manufacturer, or otherwise, does not necessarily constitute or imply its endorsement, recommendation, or favoring by the United States Government or any agency thereof or its contractors or subcontractors. The views and opinions of authors expressed herein do not necessarily state or reflect those of the United States Government or any agency thereof.

BROOKHAVEN NATIONAL LABORATORY
Associated Universities, Inc.
Upton, New York

EP&S DIVISION TECHNICAL NOTE

No. 52

B.B. Culwick
June 26, 1972

Datacom Interface to Magnet Power Supplies

Control and monitoring of devices in experimenters beam lines will be accomplished over a communication link called a DATACOM^{1,2,3}. Use of the system for this application requires definition of the device dependent portions of the transmitted and received words. The definitions and their explanation are given below.

Datacom Format

Transmissions between the central module and the remote receiver consist functionally of 3 fields. (Figure 1) The 8 bit address field is the standard DATACOM address which identifies the remote receiver. The COMMAND/STATUS field defines the commands to a device and the status received from a device. The MAGNITUDE field contains the set point data sent to a device on a SET command and the digitized analog voltage received from the device in any cycle.

Datacom Function SET

The detailed bit assignments for this function are shown in Table 1 and Figure 2.

Datacom Function READ

Following standard Datacom conventions, the READ function does not affect conditions in the power supply, but returns status and magnitude information to the central module. The bit definitions for READ are given in Figure 3.

Datacom Function READ and SET CHANNEL

This function is used to both return status and magnitude for a channel and to set a new value into the multiplexer sub-address. The new analog voltage will not be digitized until the next conversion by the ADC. The ADC invalid bit will be set until this conversion is complete. Bit assignments are given in Figure 4.

* Indicates corrections


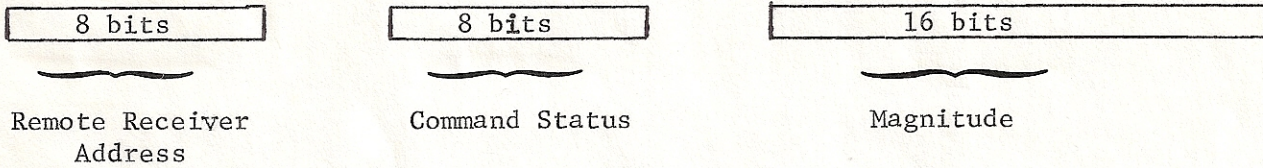


FIGURE 1 Datacom Word Format

Central to Remote:

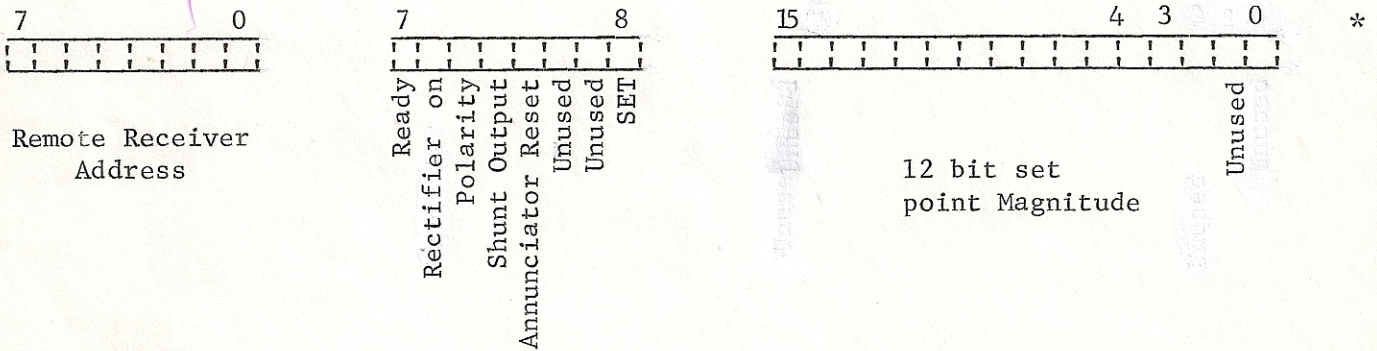

Remote to Central:


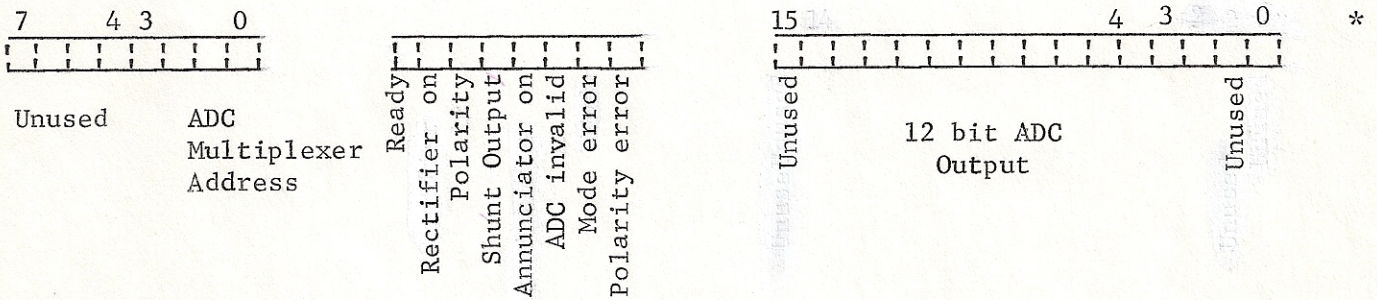


FIGURE 2 Datacom Function SET bit definitions

Central to Remote:



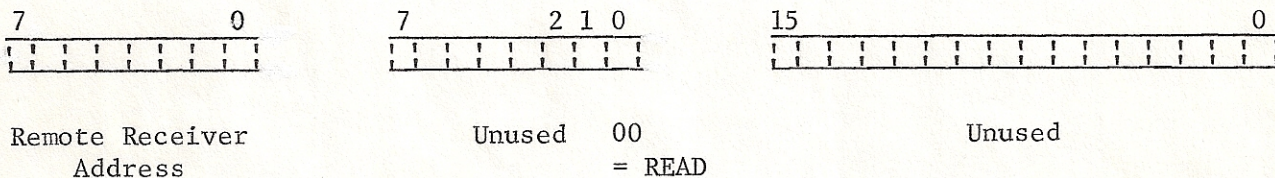


Remote to Central: As for SET

FIGURE 3 Datacom Function READ bit Definitions

FIGURE 3 Datacom Function READ bit Definitions

Central to Remote:



Remote Receiver Address

Unused 1 0
=READ
& SET
CHANNEL

Unused

Multiplexer Sub-Address

Remote to Central : As for SET

FIGURE 4 Datacom Function READ & SET CHANNEL bit Definitions.

References

1. EP & S Division Technical Note 49, Single Wire Datacom Link Technical Note 49
V.J. Kovarik Datacom Link V.J. Kovarik
2. EP & S Division Technical Note 53 Note H2A
PDP-11 Datacom Interface B.B. Culwick
3. EP & S Division Technical Note 52 Note F3A
Datacom Serial Transmission System for the PDP-11 B.B. Culwick

TABLE 1

Central to Remote:

<u>FIELD</u>	<u>BIT</u>	<u>NAME</u>	<u>DESCRIPTION</u>	
Address	7-0	DATAKOM ADDRESS	Defines the binary address of a remote receiver on this datacom line.	
Command	7	READY	Commands power supply to the READY state when set.	
	6	ON	Commands power supply to the ON state when set.	
	5	POLARITY	Commands power supply to polarity A when set*.	
	4	SHUNT OUTPUT	Commands power supply to place its shunt voltage on the common shunt leads when set.	
	3	ANNUNCIATOR RESET	Clears the fault annunciator when set and no fault present.	
	2	Unused		
	1	Unused		
	0	SET	Datacom cycle is a SET cycle when this bit set.	
MAGNITUDE	15	Unused		
	15-4	SET POINT	Reference input to supply, a 12 bit binary integer on a scale of 4000 ₁₀ 100 mV.	*
	3-0	Unused		*

* Polarity A is such that a bending magnet bends positive particles in the same sense as the AGS ring and that a quadrupole focusses positive particles in the horizontal plane.

scale reference. Others are defined at present. (The address word also corresponds with the magnitude read, even when status bit 2 is set.) See READ & SET CHANNEL.

TABLE 1 continued:

Remote to Central:

<u>FIELD</u>	<u>BIT</u>	<u>NAME</u>	<u>DESCRIPTION</u>	
Address	7-4	Unused		
	3-0	SUB-ADDRESS	Analog multiplexer address of analog input. 0 = shunt, 1 = $\frac{1}{4}$ scale reference 2 = $\frac{3}{4}$ scale reference. Others undefined at present. (The address read always corresponds with the magnitude read, even when status bit 2 is set.) See READ & SET CHANNEL.	
Status	7	READY	The state defined in the corresponding command bit exists in the power supply when these bits set.	
	6	ON		
	5	POLARITY		
	4	SHUNT OUTPUT		
	3	ANNUNCIATOR	Fault annunciator is set.	
	2	ADC ADDRESS INVALID	The current magnitude does not correspond to the latest sub-address sent when this bit set.**	
Magnitude	1	MODE ERROR	An illegal mode transition (eg. OFF - ON no READY) has been requested.	
	0	POLARITY ERROR	An illegal polarity state exists or transition under load was requested.	
	15	Unused		
	15-4	READING	Analog to digital converter output, a 12 bit binary integer on a scale of $4000_{10} = 100 \text{ mV}$.	*
	3-0	Unused		*

** The analog to digital converter operates continuously and asynchronously with request to the DATACOM. The conversion time (dual slope ADC, 1/60 S integration time) is about 30 ms. Thus the MAGNITUDE received from the remote is the last conversion result and corresponds to the sub-address received. Switching to a new sub-address is synchronized with the start of a new conversion and completion of this conversion clears the ADC INVALID flag bit.

Distribution: Administrative Staff
 Limited Distribution